

## Entertainer Portable Bluetooth Speaker

---

### Operating Instructions



#### Features

- User Friendly: Simple plug and play interface
- Bluetooth: Stream audio wirelessly from any bluetooth enabled device
- TWS: True wireless stereo pairing synchronises two speakers together to play the same music
- USB port & Micro SD card slot: Access music stored on memory devices
- FM Radio: Digital FM tuner with auto scan
- Digital Recorder: Record music and PA applications directly onto your flash drive
- Wireless Microphone: Included in box, features volume & echo controls
- Microphone Inputs: Microphone input with independent volume and echo controls
- Volume Control: Independant master volume, bass & treble controls
- AUX Input: Plug and play smart phones, tablets & MP3 players
- Power Source: Large internal battery for long play times
- Party Lights: Exciting lighting effects with multiple colours

# DYNALINK Entertainer Bluetooth Speaker


## Overview

This wireless bluetooth speaker has been designed for indoor and outdoor entertaining with coloured LED lighting to add to the party atmosphere. Powered by an internal, rechargeable battery, it is the perfect speaker to set up anywhere you need instant sound, providing up to 8 hours of use before requiring charge. The unit is True Wireless Stereo (TWS) enabled, allowing you to synchronise two speaker units together for stereo sound in a large room or outdoor area. Stream audio wirelessly from any bluetooth enabled device or play audio from the USB port or Micro SD card slot. With the included wireless microphone, you can easily make speeches or perform your own home karaoke along with the music. Music and microphone audio can also be recorded to connected USB memory sticks.

## Specifications

- Bluetooth Version: V5.0
- Frequency Range: 2.4-2.48GHz
- Working Distance: Up to 15m
- Supporting: USB/Micro SD card
- Remote Control: Up to 5m in open space
- Output Power: 35W RMS
- Distortion:  $\leq 1.0\%$
- Frequency Response: 180Hz - 20KHz
- Working Time: 6-8 hours at 80% volume
- Input Jack: AUX input, wired microphone input
- Charging Input Power: 9V DC (adapter supplied)
- Internal Battery: 7.4V, 5400mAh, 39.96Wh
- Dimensions: 560H x 250D x 260W mm

## Panel Function Description

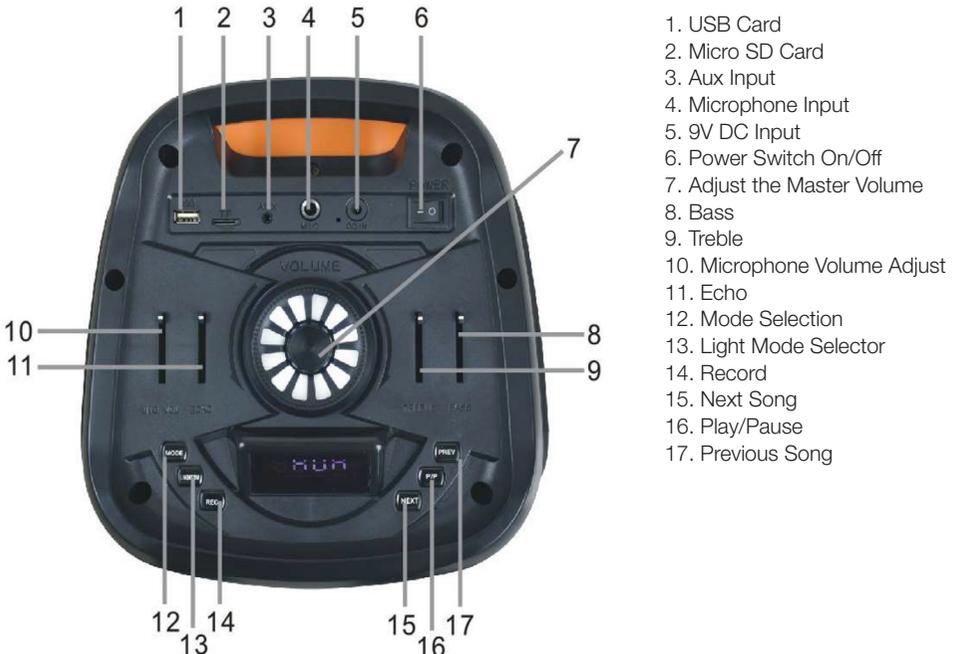

# DYNALINK Entertainer Bluetooth Speaker

## Audio Recording Function

### Step 1

- Make sure the unit is working, then put the USB or Micro SD card into the available slot.




### Step 2

- After connecting the microphone, make sure it is working normally by speaking some words, for example "testing, testing". If the microphone works well, you can start your recording.

### Step 3

- Long Press the "REC" button to start recording.
- Short Press the "REC" button to end the recording.
- Short Press the "REC PLAY" button to playback your audio once you have finished recording.

## Remote Instructions

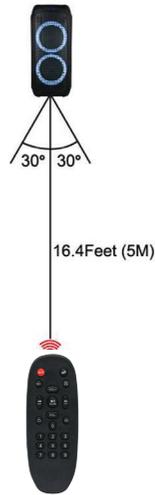

1. MUTE: Press this button to mute the unit.
2. Press this button to toggle between the various inputs (AUX, USB/Micro SD card, Bluetooth)
  - 2a. Long press this button to turn the voice prompt On/Off.
3. Press this button to start recording.
4. Press this button to increase the master volume.
5. Press this button to pause or play the unit.
6. Press this button to select the previous song.
7. Press this button to reduce the master volume.
8. Press this button to repeat one/all.
9. Press this button to play the recording.
10. Press this button to select the next song.
11. Press this button to select the EQ mode: Normal, Jazz, Rock, Pop, Classical.
12. 0-9: Key number for selecting the certain songs in the USB/Micro SD Card or bluetooth device.

## Operation of FM Receiving Function

- **PLAY/PAUSE**: press the key and the radio will scan the local radio station and save it automatically.
- **NEXT +** : press the key and the radio will read the saved radio station and select the next one in ascending order;
- **PREV -** : press the key and the radio will read the saved radio station and select the previous one in descending order.

### Other Functions:

- To turn Voice Confirmation for mode selection On/Off, push and hold **“MODE”** button for 2 seconds.
- To turn Microphone Priority On/Off, push and hold **“LIGHT SW”** button for 2 seconds.

*Please Note: The “MODE” button is used to switch radio status in order to use the radio functions; if the receiving frequency needs inputting manually, press the numbers on the remote control directly to input the frequency of the radio station.*

## Bluetooth Function Instructions

### STEP 1

Press the **“MODE”** button on the front panel to launch the bluetooth application. You will then see **“bLUE”** displayed on the screen.

### STEP 2

Set the bluetooth function of your other device, such as your smart phone or computer, to **“On”**. The unit will automatically begin scanning for nearby bluetooth devices.

### STEP 3

When the device **“BT SPEAKER”** appears on your screen, tap to connect to it. It will show **“Connected”** on your devices screen after connecting successfully.

## Playback from USB/SD Memory Cards

When playing back MP3 files from USB or Micro SD card, it is important to note that the drive must be formatted in FAT32 file system. Songs will be played back in the order in which they were copied to the card/USB stick.

Delete all unnecessary files from the drive before attempting playback to ensure reliable playback and sequencing of files.


## Adding a Second Speaker (TWS)

You can connect your **master** speaker with another **slave** speaker to enjoy a True Wireless Stereo experience.

1. Turn ON speaker NO.1 (**master** speaker).



2. Press "**MODE**" button on the **master** speaker to change bluetooth functions (message: "**bLUE**")

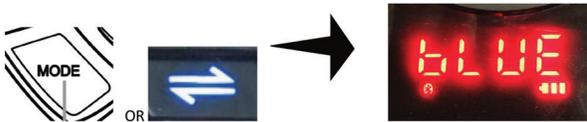

3. Turn ON speaker NO.2 (**slave** speaker).



4. Press the "**MODE**" button on the "**slave** speaker" to change bluetooth functions (message: "**bLUE**")



5. Keep pressing the "**NEXT**" button on the "**slave** speaker" until you hear "**BLUETOOTH CONNECTED**"  
The speakers will pair automatically.



6. Connect your audio device to the "**master** speaker" and enjoy TRUE WIRELESS STEREO sound.

## Charging Indicator

Charging: LED light will be **RED**

Fully Charged: LED light will be **GREEN**

Charging Time: 5 to 6 hours

Working Time: 6 to 8 hours

## Charging Instructions

1. This speaker has a rechargeable battery. When the battery power is flat, plug in the included adapter to charge the speaker.

2. When the unit is charging, please make sure AC/DC switch is on. Once charged, please unplug the socket from electricity safely. For first time use, charge the speaker for 10 to 12 hours. After the first use, charging will take 5 to 6 hours. Average working time of the speaker battery is around 6 to 8 hours, typically at 80% volume.

3. In order to maintain a longer battery life, we recommend charging the speaker every time the battery has gone flat. If the battery is left uncharged for a long period of time, it could cause damage to the battery.

## Troubleshooting

Fault	Simple Fault Analysis	Troubleshooting
Failing to turn on	<ul style="list-style-type: none"><li>• The power switch is not on</li><li>• Built-in battery is discharged</li></ul>	<ul style="list-style-type: none"><li>• Turn power switch on</li><li>• Use power adaptor to charge the battery</li></ul>
No sound	<ul style="list-style-type: none"><li>• Failing to input sound source</li><li>• Failing to establish signal line</li><li>• Main volume is switched to minimum</li><li>• USB disk playing has no sound</li><li>• Faults with external signal source</li><li>• Poor contact or damage of external signal line</li></ul>	<ul style="list-style-type: none"><li>• Change signal source</li><li>• Reconnect signal line</li><li>• Properly adjust the volume knob</li><li>• Inspect USB disk or audio switch</li><li>• Change signal source</li><li>• Readjust or change signal line</li><li>• Totally insert the microphone to the jack</li></ul>
External microphone has no sound	<ul style="list-style-type: none"><li>• External microphone is not fully inserted in the jack</li><li>• The external microphone switch is not on</li><li>• The volume knob of microphone is too low</li></ul>	<ul style="list-style-type: none"><li>• Turn the switch of the microphone on</li><li>• Properly adjust the volume knob of microphone</li></ul>

If there is still a fault after the inspection above, please refer to the warranty page at the back of this manual. **This unit contains no user-serviceable parts inside. Do not open.**

## DYNALINK Entertainer Bluetooth Speaker

Altronic Distributors warrants this product for one year from date of purchase from Altronics or its resellers to the consumer. If this item is part of an installation or another product, please contact the installer or supplier for your warranty.

During the warranty period, we undertake to repair or replace your product at no charge if found to be defective due to a manufacturing fault. The warranty excludes damage by misuse or incorrect installation (i.e. failure to install and operate device according to specifications in the supplied instruction manual), neglect, shipping accident, or no fault found, nor by use in a way or manner not intended by the supplier.

For repair or service please contact your **PLACE OF PURCHASE**.

If this item was purchased directly from Altronics please make a warranty claim by:

**1. FOR MAIL ORDER CUSTOMERS (includes school and trade orders),**

a) Calling your nearest store location and quoting your tax invoice number.

b) Upon contacting Altronics, we will issue an R.A. (Return Authorisation). As Altronics have a number of service agents throughout Australia, a copy of the R.A. will be emailed, faxed or mailed to you with full instructions of how and where to send the goods. The freight for shipping goods back to Altronics for all repairs is at the customers expense.

c) A copy of the R.A. form, (or at the very minimum, the R.A. number) must accompany the goods to effect the repair.

d) Altronics will pay the return freight to the customer where the warranty claim has been accepted.

e) Please quote the R.A. number in any correspondence to us.

**2. FOR OVER THE COUNTER PURCHASES to make a warranty claim, please return the goods to us in any of our stores, with a copy of your proof of purchase (tax invoice).**

a) Upon leaving the goods at one of our stores, an R.A. number will be issued to you.

b) Once repaired, you will be contacted, advising that the goods are ready to be collected from the store.

It is at Altronics discretion as to whether the goods will be repaired or replaced (whilst under warranty); and as to whether identical goods will be used to replace the item due to changes of models / products.

Note: Under no circumstances should you attempt to repair the device yourself or via a non-authorized Altronics service centre, as this will invalidate the warranty!

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Distributed by Altronic Distributors Pty. Ltd.  
Phone: (08) 9428 2199  
altronics.com.au

Revision 16/10/2020