

digitech

Portable
**Boom Box
Speaker**
with Bluetooth® TWS



Model:
CS2602

Instruction Manual

FEATURES:

- 2.1CH portable Bluetooth speaker
- Dedicated button for TWS
- USB support
- Three different modes of RGB Lighting
- A2DP Bluetooth
- FM radio support
- Line-in function
- Built-in lithium rechargeable battery
- Robust carry handle that is simple to remove.


SPECIFICATIONS:

Bluetooth® Version:	V5.1+BR+EDR
Horn Size:	2"
Sub-woofer Size:	3.2"
RMS Power Output:	20W
Peak Power Output:	40W
Battery Capacity:	3.7V, 3000mAh
Play Time:	2 hours (Max. Volume)
Frequency Response:	70Hz-18Khz
Bluetooth® Range:	10m
Dimensions:	356(L) x 134(W) x 178(H)mm

PACKAGE CONTENTS:

- 1 x Portable Bluetooth Speaker
- 1 x Charging Cable
- 1 x Audio Cable
- 1 x User Manual
- 1 x Shoulder Strap

PRODUCT DETAILS:

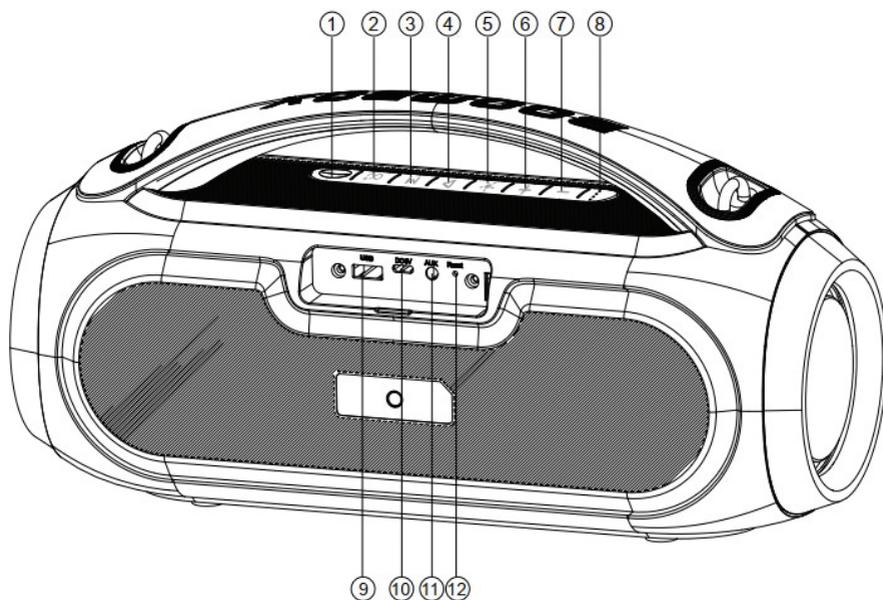

1	Power On/Off
2	TWS Button
3	Mode Button (switch to Bluetooth, FM radio, USB and AUX modes)
4	Play/Pause
5	RGB Light

6	Forward/Volume Up
7	Backward/Volume Down
8	Battery Indicator
9	USB port
10	Type-C charging jack
11	AUX Input
12	Reset Jack

OPERATION INSTRUCTIONS:

Power On/Off:

Long-press the Power button to turn the speaker on and off.

Bluetooth:

1. Bluetooth will automatically turn on when the unit is powered up.
2. Turn on Bluetooth on your Mobile/Bluetooth device and search for “CS2602” then connect to it.
3. Play music from your Mobile/Bluetooth device.
4. Long-press the Forward or Backward button on the device to skip or repeat music.
5. Short-press the Forward or Backward button to adjust volume up and down.
6. Short-press the Play/Pause button on the device to play/pause music.
7. Long-press the TWS button to disconnect the Bluetooth connection with your Mobile/Bluetooth device.

TWS Function:

1. Turn on two identical speakers you want to pair, both under BT mode. Only need to set up one of the two units.
2. Short-press the “TWS” button to pair. The TWS button will remain lit up after pairing successfully.
3. To achieve a more intense surround sound impression, use your Bluetooth device to play music through the two linked Speakers.
4. Short-press the “TWS” button again to exit TWS mode.

RGB Light:

The RGB light is on when the speaker is powered on. Users can short-press the RGB Light button to turn on the three different light modes and then turn it off.

OPERATION INSTRUCTIONS:

FM Radio:

1. Turn the power button to “ON”, press the “MODE” button to FM state.
2. Short-press the “Play/Pause” button to mute the speaker; long-press the “Play/Pause” button to automatically search for and save FM stations.
3. Long press the Forward or Backward button to change the stored FM channel.
4. Short press Forward or Backward button to adjust the volume.

Playing music from a USB device:

1. Turn the speaker on.
2. Insert the USB flash disk into the slot and the music will begin playing automatically..
3. Long press the Forward or Backward button to select songs you like, and short press them to adjust the volume up and down.
4. Press Play/Pause to play or pause.

Note: In any playing mode, when you insert a USB disk into the speaker, it will switch to playing it from the USB device.

AUX-IN:

- For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device’s “Line Out” to the “Aux In” of this device.
- In any playing mode, when you use the audio cable to connect the device, it will auto-switch to the AUX mode.
- When using an external device, all functions can be controlled by the external device.

Reset Functionality:

If the speaker does not turn off or respond, the user can short-press the Reset jack with a small round pin to reset the speaker.

OPERATION INSTRUCTIONS:

Recharging the battery:

- The charger is not included in the package. Please charge the speaker via a standard 5V/1-2A charger or via a PC.
- The charging time is approximately 5 hours. Charge is indicated by four fully lit LEDs, which will turn off if the device is not turned on.

IMPORTANT: When playing music during charging, please put the volume in the middle, because some music with a heavy bass will draw more current than the charger is able to provide.

Additional Information:

If the speaker does not turn off or respond, the user can short-press the reset jack with a small round pin to reset the speaker.

GENERAL SAFETY INSTRUCTIONS:

WARNING!

- Don't use/store this speaker in extreme temperatures.
- Please store it in a cool and dry area, keeping away from anything that generates heat, such as radiators, stoves, etc.
- In order to have hearing protection and an extended speaker life, avoid listening to songs at maximum volume.
- When cleaning this speaker, use a soft dry cloth. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

Distributed by:
Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia

www.electusdistribution.com.au

Made in China