

# Signet

INSPECTION VIDEO CAMERA WITH COLOR LCD MONITOR

| **USER MANUAL** |



Version 1.1

Please read this user manual carefully before using this product.  
Failure to understand operation procedures may result in injury.

# Signet

## INSPECTION VIDEO CAMERA WITH COLOR LCD MONITOR

### Welcome

Congratulations on your purchase of our inspection video camera with color LCD monitor. Please read the user manual carefully before using this product. This product is designed as a remote inspection device, appropriate for use in surveying pipes or other hard-to-reach places, equipment or furnishing installation, car repair, etc. Features include waterproof LED lens, real-time viewing.

### Packing List

GL8805



Mini 9mm Waterproof LED Lens



2.5" TFT-LCD Monitor x 1



Hook



Mirror



Magnet



 
Rubber Ring

### Structure

Flexible Tube

Mini 9mm Waterproof LED Lens

Battery Compartment

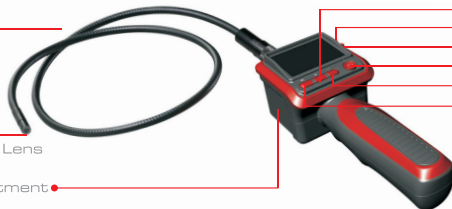

LEDs brightness control

Power Indicator

Low Voltage Indicator

Power ON/OFF

Mirror button





LCD contrast control

Handle

## Installation
    
### To Install Batteries

1. Remove the cover and liberate the battery compartment from its casing;
2. Insert four (4) AA batteries into their appropriate slots, with proper orientation, as indicated on the battery compartment;

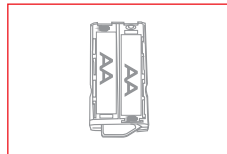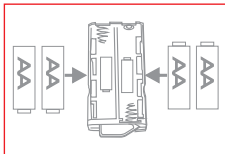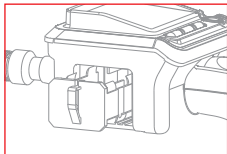
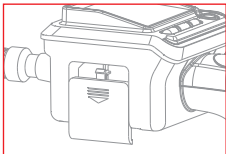


3. Reinstall battery compartment and replace battery cover.

**NOTE:** Dry your hands before installation or replacing batteries.



### To Attach Flexible Tube with Monitor

  To connect the flexible tube camera with monitor, first make sure that the keyed end of the tube is aligned with the slot in the handle, then use slight force to push them together. Once properly aligned, twist the threaded knob clockwise until the connection is securely in place.

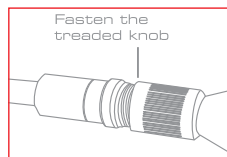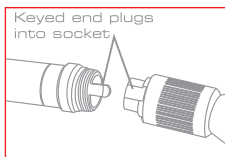





### To Install Accessory

  The three (3) included accessories (mirror, hook and magnet) are all attached to the tube in the same way as illustrated below:

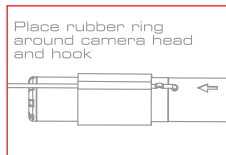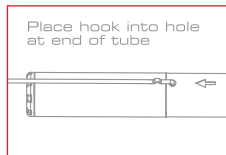

## Operation

    1. Press the power switch to turn the camera on (refer to Fig-1). The power indicator will illuminate and the LCD will become viewable.
2. If the image on the LCD is unclear, please adjust brightness, contrast and mirror by toggling the buttons on the monitor face.
  - \* LEDs Brightness Control: The 6 levels of LED brightness can be adjusted by pressing the LEDs Brightness Control button (refer to Fig-2).
  - \* LCD Contrast Control: The 8 levels of LCD contrast may be adjusted by pressing the LCD Contrast Control button.
3. To rotate the orientation of the image displayed on the LCD by 90°, press the Mirror button. There are four (4) possible image orientations that you can toggle through by pressing this button.
4. When in use, the tube should easily maneuver itself into position. Do not apply excessive force (refer to Fig-3).
5. The accessories included with Explorer Compact can be used to retrieve small items like dropped rings or screws (refer to Fig-4).

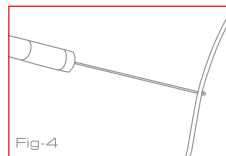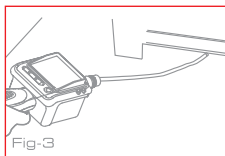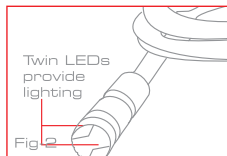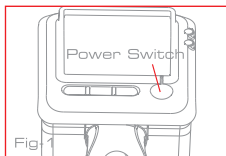

**TIP!** The flexible tube can be bent into numerous shapes that may help you explore areas you otherwise thought were impossible to see.

**NOTE:** Do not immerse the monitor in water. Store in a dry place. Such measures reduce the risk of electric shock and damage. Only the lens and tube are water resistant when the unit is fully assembled.

## Specifications

Explorer Compact	Imaging Sensor	CMOS
	Total Pixels	640 x 480 (PAL / NTSC)
	Horizontal Viewing Angle	45°
	Minimum Illumination	0 Lux
	Night Vision Range	1.5m
	Power Supply	4 x AA batteries
	Tube Diameter	9mm
	Waterproof Capacity	IP67 (for lens/tube only)
	LCD Screen Type	2.36" TFT-LCD
	Effective Pixels	480 x 234
	Video System	PAL / NTSC
	Consumption Current (Max.)	150mA
	Dimensions (W x D x H)	201 x 83 x 59(mm)
	Approx. Weight	383g
Operating Temperature	-10°C~50°C/14°F~122°F	
Operating Humidity (Max.)	15~85%RH	

\* All specifications are subject to minor change without prior notice.

## Warnings

- Turn off the system if it is not in use.
- This product can only be completely disconnected from its power source by unplugging the power adapter.
- Do not cut the DC power cable of provided with this product to fit with another power source.
- Attention should be given to the environment aspects of battery disposal.
- Remove the batteries when cleaning the unit.
- Remove the batteries before storing the unit for a long time.
- When necessary, REPLACE ALL FOUR (4) BATTERIES in this unit with new ones, not one (1) or two (2) batteries at a time.
- Use only the size and type of battery specified.
- Be sure to install the battery with the correct polarity as indicated in the battery compartment.
- Properly dispose of the battery. Exposure to high temperatures can cause the battery to explode, so do not dispose of in a fire. Place tape over the terminals to prevent direct contact with other objects. Some countries have regulations concerning battery disposal. Please follow all applicable regulations.

## **FCC Information**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference;
- (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### EU Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

