

19" Racking System - Freestanding/Wall Mountable

Models Available:

HD5506 6U 450mm Deep

HD5509 9U 450mm Deep

HD5512 12U 450mm Deep

HD5515 15U 450mm Deep

HD5518 18U 450mm Deep

HD5522 22U 450mm Deep

Box Contents

1 x Base plate

1 x Top cover (with fan holes)

1 x Front frame

1 x Rear frame (with wall mount holes)

4 x Mounting strips

2 x Locking side panels

1 x Locking rear panel

1 x Assembly hardware pack

Assembly Instructions

During this process, it is advisable not to fully tighten all bolts until the rack is completely assembled. Once assembly is complete, ensure top and bottom panels are aligned correctly and tighten all bolts securely.




Fitting optional H 5296 castors. (sold separately)

To fit castors to the assembled rack frame, tip the rack onto its side and screw castors into the castor mounts using M6 x 12mm bolts.


STEP 1

Lay out base onto a flat surface and place the front upright frame into the base. Secure using the corner holes with M6 x 25mm bolts and hex nuts.

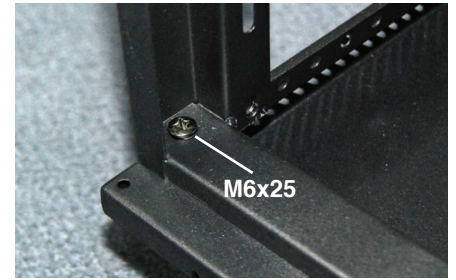

STEP 2

Place rear upright framing into the base. Secure using M6 x 12mm bolts and nuts.

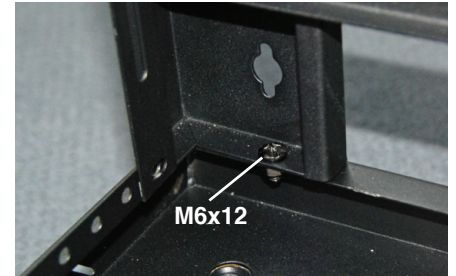

STEP 3

Fit the top cover to the rack and secure to the front and rear frames. Use M6 x 25mm bolts at front and M6 x 12mm bolts at rear.



STEP 4

Fit the four mounting strips in each corner and secure at top and bottom of rack using M6 x 12mm bolts and nuts. These pieces are punched with squares to allow mounting of equipment with the included captive nuts.



STEP 5

To fit door, locate the fixed peg in the base and pull down the spring loaded pin to fit it into the top cover.



STEP 6

Fit locking side panels by pushing the bottom locating pegs into the base first, push forward and lock using the key at the top.

