CONCORD



сsp2wH20B4K-A 2-Way HDMI Splitter with Downscaling

Box Contents:




1 x 2-Way 4K HDMI Switcher




1 x Mains Power Adaptor


Product Diagram:

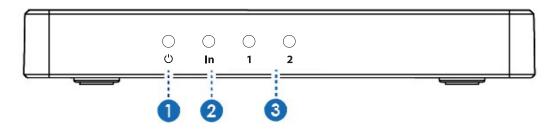

#	Feature:	Description:
1	Power LED Indicator	Displays the power status
2	HDMI Input LED Indicator	Displays the status of the HDMI input when connected
3	HDMI Output LED Indicators	Displays the status of the two HDMI outputs when connected

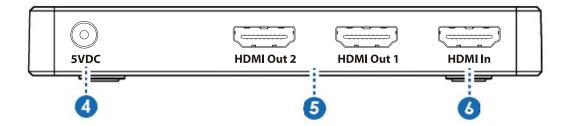


#	Feature:	Description:
4	DC Power Socket	Connect to the 5VDC
		mains power adaptor
5	HDMI Outputs	Connect two TV's or
	(1-2)	monitors for split display
6	HDMI Input	Connect to the HDMI
		source device

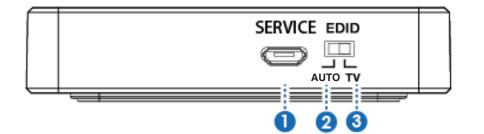

	Feature:	Description:
1	Service USB Port	Firmware Upgrade Only (Not Required)
2	EDID Auto Switch	Auto detects the EDID settings for both 4K and 1080p TV's
3	EDID TV Switch	Switch to read the EDID settings of the display device connected to HDMI Output 1

Connection Diagram:

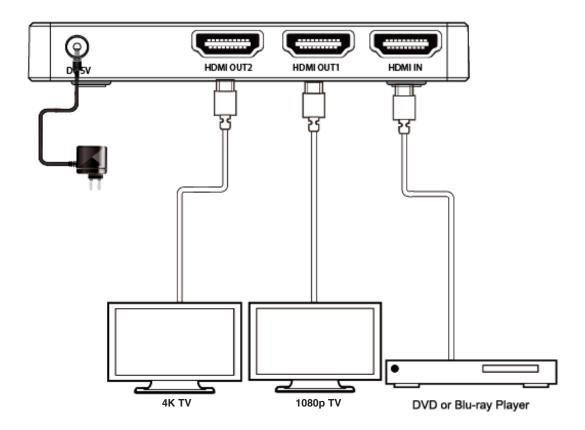

Operation:

1. Connect the DC plug of the mains power adaptor to the power socket of the splitter. Plug in the mains power adaptor to a 240VAC wall socket and turn it on.

2. Connect a HDMI cable (not included) from your source device such as Pay TV, DVD players or media players to the HDMI input of the splitter.

3. Connect HDMI cables (not included) from the two HDMI outputs of the splitter to two TV's or Monitor's HDMI inputs.

Note: If you find that there is no signal showing on your display. Try to Switch the EDID switch to the opposite side to either Auto or TV which is located on the side of the unit.

Troubleshooting:

Problem	Solution
	Check to see if your source device and TV's/monitors are all switched on
	Check to see if the mains power adaptor is connected properly and switched on
No Video Output	Check to see your source device and monitors/TV's resolution and frequency matches the supported resolution of the HDMI splitter.
	Check to see if your HDMI cables are faulty
	Reconnect all the HDMI cables on the inputs and outputs

Safety:

- 1. Do not open or repair the device without professional assistance to avoid electrical shock.
- 2. Do not expose this unit to water, moisture or any liquid.
- 3. Position the unit in a well ventilated area to prevent the unit from overheating.
- 4. Only use the supplied 5VDC, 1A power adaptor. If you use any third party power supplies, ensure the voltage is the same to prevent the unit from damage.

Features:

- 4K to 1080p Downscaling
- Up to 4K x 2K Resolution
- High-Dynamic-Range (HDR) Video
- EDID Data Transmission
- HDCP, 3D & CEC Bypass

Specifications:

Inputs: 1 x HDMI Outputs: 2 x HDMI HDMI: 2.0b HDCP: 2.2, 1.4 HDR: 10 Resolution: 4K (3840 x 2160) @ 60/50/30Hz 1080p (1920 x 1080) @ 120/60/30Hz 1080i (1920 x 1080) @ 50/60Hz 720p (1280 x 720) @ 50/60Hz 480p (640 x 480) @ 60/50Hz 480i (640 x 480) @ 60/50Hz Video Bandwidth: 18Gbps Audio: LPCM 2/5.1/7.1CH, Dolby Digital, DTS 5.1, Dolby Digital+, Dolby TrueHD, DTS-HD Master Audio, Dolby Atmos, DTS:X Colour Depth: 10-bit Power Supply: 5VDC, 1A Power Consumption: 200mA (Max) Dimensions: 100(W) x 56(D) x 16(H)mm

For Concord AV Solutions visit

www.concord.support

Distributed by: Electus Distribution Pty. Ltd. 320 Victoria Rd, Rydalmere NSW 2116 Australia Ph: 1300 762 627 Int'l: +61 2 8832 3200 Fax: 1300 738 500