

3-Way TOSLINK Optical Splitter



User Manual AC-1590

Box Contents:




1 x 3-Way TOSLINK Optical Splitter



1 x USB Power Cable

Product Diagram:

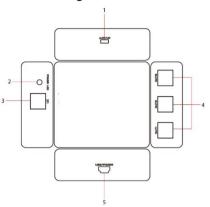


	#	Feature:	Description:
	1.	On/Off Switch	Press the switch to turn the unit on or off
	2.	LED Status Indicator	Indicates the power status
Γ.	3.	TOSLINK Input	Connect to the source device such as TV,
			monitoı, DVD or Blu-ray player
	4.	TOSLINK Outputs	Connect up to three outputs such as sound
			bars, headphones or amplifiers
	5.	USB Power Socket	Connect to a USB power socket

Operation:

- 1. Connect the USB power cable to a USB charging socket or USB mains power adaptor (not included).
- 2. Connect the opposite end of the USB charging cable to the USB power socket located on the side of the TOSLINK splitter.
- Connect a TOSLINK optical cable (not included) to your source device such as a TV, monitor or DVD player. Connect the opposite end of the cable to the TOSLINK input on the splitter.
- 4. Connect up to three TOSLINK optical cables (not included) to the TOSLINK outputs on the splitter. Connect the opposite end of the cables to your devices such as sound bars, headphones or amplifiers.
- 5. Press the power switch to on and your audio should now should be transmitting.

Connection Diagram:



Troubleshooting:

Problem:	Solution:
No Audio	Check the source device if it is
	properly transmitting audio.
	Check if your source device is
	outputting audio through optical
	correctly. Some devices like TV's
	will output to their internal
	speakers instead of optical. Double
	check the devices internal settings.
	Check if the TOSLINK optical cables
	are all working correctly.
	Reconnect all the TOSLINK optical
	cables again to make sure their
	connected correctly.
	Check if the output devices are
	working correctly.

Specifications:

Inputs: 1 x TOSLINK (Optical)

Outputs: 3 x TOSLINK (Optical)

Frequency: 96KHz

Baud Rate: 16Mbps

Peak Wavelength: 650nm

Audio: LPCM 2.0, DTS, Dolby AC-3

Supported Cable Length: 40m (Total) Power Supply: 5VDC, 500mA (USB Mini B)

Power Consumption: 200mA (Max)

Dimensions: 60(W) x 54(D) x 20(H)mm

Distributed by: TechBrands by Electus Distribution Pty. Ltd. 320 Victoria Rd, Rydalimere NSW 2116 Australia Ph: 1300 738 555 Intl: +61 2883 2300 Fax: 1300 738 500 www.techbands.com