


MAGLOC200S ELECTRO-MAGNETIC GATE LOCK

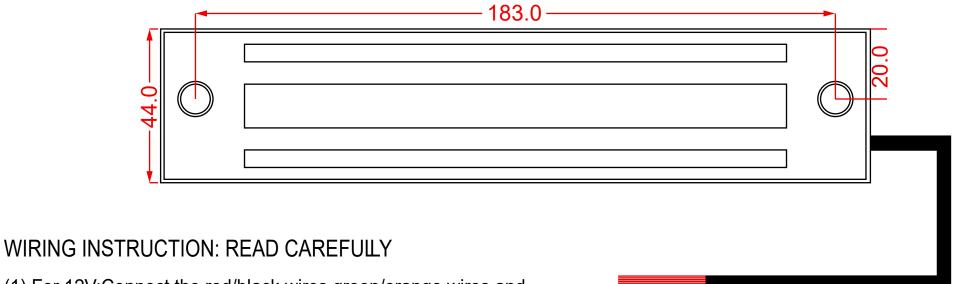

- (1) For 12V:Connect the red/black wires, green/orange wires and connect to 12V source.
- (2) For 24V:Short black/green wires and connect red and orange ones to 24V source.
- (3) Lock status sensor

12V Red Black TNRZ Green Orange Red Orange Orange COM. SENSOR(REED SW.) Blue NC COM. Yellow NO (UNLOCK)

☆. NOTE:

- (1) Reed switch dry contacts are rated max 3W (max switching contact 0.25A) at 30VDC/AC for safe operation.Do not exceed this rating.
- (2) Varistor(TNR) should be placed as directed.
- (3) Before installing, add the threadlocker to all screws. Firmly tighten the screws to avoid loosening.