
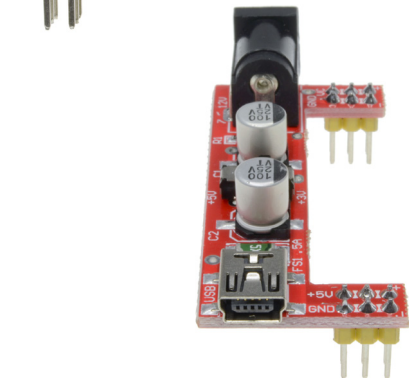
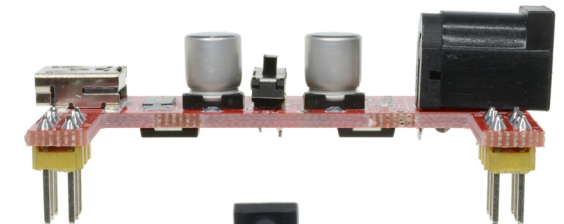
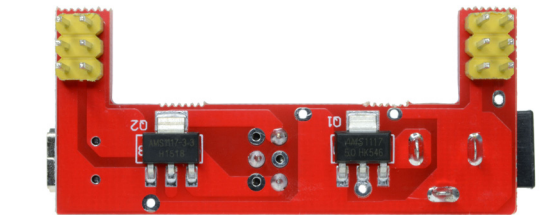
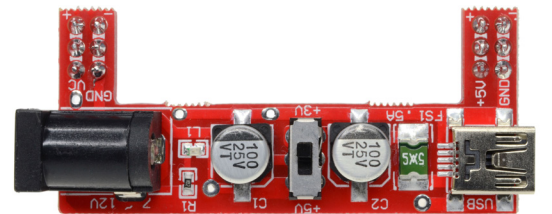


ARD 2 **Arduino Compatibles**
Controllers, Shields, Modules & Sensors

Breadboard Power Supply ARD2-4027

- Choose between 3.3V and 5V
- Can be powered via miniUSB or DC power head

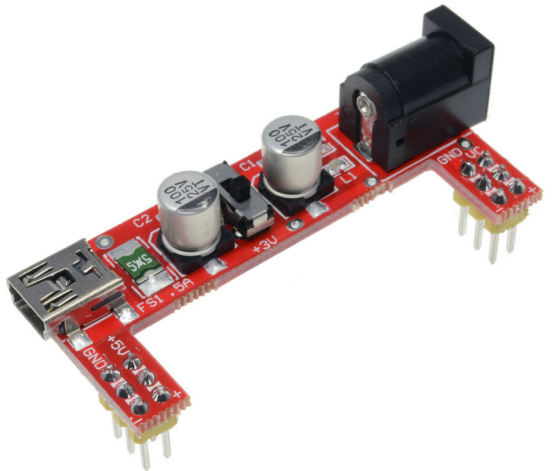

Description

Add a power supply to your Arduino project with this breadboard power supply. It plugs directly into a breadboard to supply either 3.3V or 5.0V power. The module itself can be powered either by DC power head or miniUSB.

Specifications

Input Voltage	6.5–12VDC or miniUSB power supply
Output Voltage	3.3V or 5.0V
Max. Output Current	<700mA