

Fairlight Desktop Console



Fairlight Desktop Console is an audio mixing control surface that allows you to mix multiple tracks at once! You get a familiar mixer design with 12 motorized faders, touch sensitive encoder knobs and illuminated buttons. The faders are extremely smooth to move and provide the perfect amount of resistance, allowing subtle adjustments. The console's controls can be used for functions including pan, solo, mute, dynamics, EQ, plug-in parameters and more. Each channel strip LCD displays meters, panning, track name and more. An HDMI output gives you instant graphic feedback for all channels, bus and effects from the desktop console.

A\$5,199

Connections

Computer Interface

USB Type-C.

Ethernet


Ethernet supports 10/100/1000 BaseT.

HDMI Video Output

1 x HDMI Type A.

Updates and Configuration

1 x USB Type-C for software configuration and software updates.

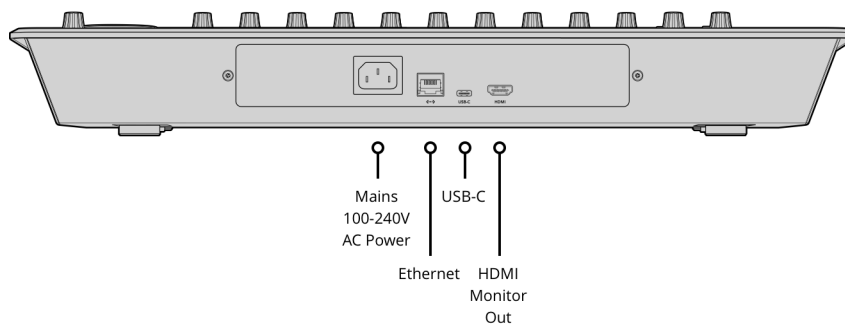

Standards

HDMI Video Standards

1080p23.98, 1080p24, 1080p25, 1080p29.97, 1080p30, 1080p50, 1080p59.94, 1080p60

Software

Internal software upgrade via updater application.

Operating Systems



Mac 10.15 Catalina or later.



Windows 10, 64-bit.

Settings Control

Fairlight Studio and Console setup utility software when connected by USB.

Power Requirements

Power Supply

Internal 100 - 240V AC 50/60Hz with IEC C14 mains input.

Power Usage

20W max.

Physical Specifications



Environmental Specifications

Operating Temperature

0° to 40°C (32° to 104°F)

Storage Temperature

-20° to 60°C (-4° to 140°F)

Relative Humidity

0% to 90% non-condensing

What's Included

Fairlight Desktop Console
1.5m USB-C Cable.

Warranty

1 Year Limited Manufacturer's Warranty.

All items on this website are copyright Blackmagic Design Pty. Ltd. 2022, all rights reserved.
All trademarks are property of their respective owners. MSRP includes GST and excludes shipping costs.
This website uses remarketing services to advertise on third party websites to previous visitors to our site.
You can opt out at any time by changing cookie settings. [Privacy Policy](#)

Blackmagic Design Authorized Reseller