

# HyperDeck Studio HD Plus



HyperDeck Studio HD Plus includes all the features of the Mini model, but is larger so it has more space for extra controls and extra connections. This model adds 6G-SDI so it can record and playback ProRes up to Ultra HD 30fps, and it includes an SDI loop out and HDR support. Plus the two 6G-SDI outputs allow fill and key playback up to 1080p60. There is also an HDMI input and a dedicated 3G-SDI monitoring output with overlays. Any button pushed on the front panel is sent to a dedicated RS-422 remote output and the DC power is now a broadcast style XLR connector. The front panel is also upgraded with better transport control buttons, a headphone socket and built in speaker.

**A\$1,185**

## Connections

### SDI Video Inputs

1

### SDI Video Outputs

2

### SDI Monitor Outputs

1

### SDI Rates

270Mb, 1.5G, 3G, 6G.

### HDMI 2.0 Video Inputs

1

### HDMI 2.0 Video Outputs

1

### Built in Speaker

Mono

### Audio Output

1 x 6.35 mm headphone jack.

### Screen

2.2 inch LCD.

### Timecode Connections

1 x BNC In, 1 x BNC Out.

### Reference Connections

1 x BNC In, 1 x BNC Out.

Tri-Sync or Black Burst.

### SDI Audio Inputs

16 channels embedded audio.

### SDI Audio Outputs

16 channels embedded audio.

### HDMI Audio Inputs

8 channels embedded audio.

### HDMI Audio Outputs

8 channels embedded audio.

### Remote Control

1 x RS-422 In, 1 x RS-422 Out.

### Recorder Configuration


Via user interface or Blackmagic HyperDeck Ethernet Protocol.

### Ethernet

1Gb/s

### Computer Interface

1 x USB Type-C 3.0 (up to 5Gb/s) for external drive recording, webcam out, software configuration and updates.

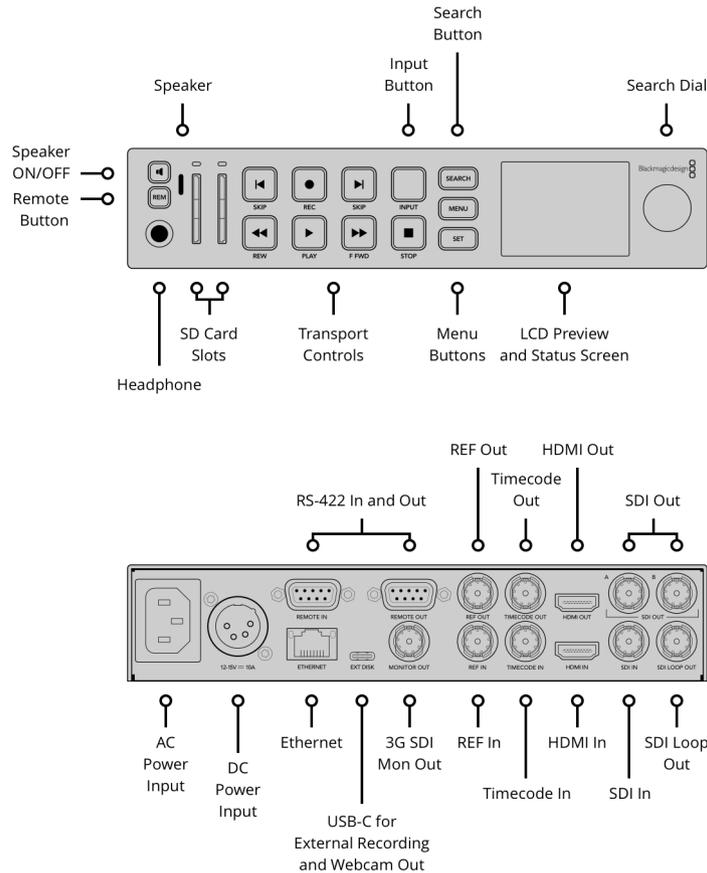

## Standards

### SD Video Standards

525i59.94 NTSC, 625i50 PAL

### HD Video Standards

720p50, 720p59.94, 720p60  
 1080i50, 1080i59.94, 1080i60  
 1080p23.98, 1080p24, 1080p25,  
 1080p29.97, 1080p30, 1080p50,  
 1080p59.94, 1080p60  
 1080PsF23.98, 1080PsF24,  
 1080PsF25, 1080PsF29.97, 1080PsF30

### 2K DCI Video Standards

2Kp23.98 DCI, 2Kp24 DCI, 2Kp25 DCI,  
 2Kp29.97 DCI, 2Kp30 DCI

### Ultra HD Video Standards

2160p23.98, 2160p24, 2160p25,  
 2160p29.97, 2160p30

### 4K DCI Video Standards

4Kp23.98 DCI, 4Kp24 DCI, 4Kp25 DCI,  
 4Kp29.97 DCI, 4Kp30 DCI

### SDI Compliance

SMPTE 259M, SMPTE 292M,  
 SMPTE 296M, SMPTE 424M,  
 SMPTE 425M level A and B,  
 SMPTE 2081-1, SMPTE 2081-10,  
 SMPTE 2084 and SMPTE 2108-1.

### SDI Metadata Support

HD RP188 and closed captioning  
 CEA-708. HDR Metadata supported  
 on SDI.

### Supported HDMI Formats

525i59.94 NTSC, 625i50 PAL,  
 720p50, 720p59.94, 720p60,  
 1080i50, 1080i59.94, 1080i60,  
 1080p23.98, 1080p24, 1080p25,  
 1080p29.97, 1080p30, 1080p50,  
 1080p59.94, 1080p60,  
 2Kp23.98 DCI, 2Kp24 DCI, 2Kp25 DCI,  
 2Kp29.97 DCI, 2Kp30 DCI,  
 2160p23.98, 2160p24, 2160p25,  
 2160p29.97, 2160p30,  
 4Kp23.98 DCI, 4Kp24 DCI, 4Kp25 DCI,  
 4Kp29.97 DCI, 4Kp30 DCI

### Audio Sampling

Television standard 24-bit, 48 kHz  
 sample rate.

### Video Sampling

4:2:2 YUV

### Color Precision

10-bit

---

**Color Space**

REC 601, REC 709, REC 2020. 33 point 3D LUTS can be applied to SDI monitor out.

**HDR Support**

Hybrid Log-Gamma, ST2084 300, ST2084 500, ST2084 800, ST2084 1000, ST2084 2000, ST2084 4000, ST2084

**Copy Protection**

HDMI input is unable to capture from copy protected HDMI sources. Always confirm copyright ownership before capture or distribution of content.

**Multi Rate Support**

Auto detection of SD, HD and 6G-SDI.

---

## Media

**Media**

2 x SD card slots 1 x USB-C 3.0 expansion port for external recording of SD, HD, 2K DCI, Ultra HD and 4K DCI.

Please refer to either the Manual or the Information Note at [www.blackmagicdesign.com/support](http://www.blackmagicdesign.com/support) for compatible media.

**Media Type**

UHS-I and UHS-II SD cards.

**Media Format**

Can format media to ExFAT (Windows/Mac) or HFS+ (Mac) file systems.

---

## Supported Codecs

ProRes HQ QuickTime, ProRes 422 QuickTime, ProRes LT QuickTime, ProRes Proxy QuickTime for all formats up to 2160p30. Playback only of ProRes 4444 QuickTime up to 1080p60 with auto routing of fill and key over SDI A and B outputs. DNxHD 220x, DNxHD 220x MXF, DNxHD 145, DNxHD 145 MXF, DNxHD 45, DNxHD 45 MXF for 720p and 1080p HD formats up to 60fps. DNxHR HQX, DNxHR HQX MXF, DNxHR SQ, DNxHR SQ MXF, DNxHR LB, DNxHR LB MXF for 2K DCI and 2160p formats up to 30fps. H.264 SDI 4:2:2 10-bit, H.264 High 4:2:0 8-bit, H.264 Medium 4:2:0 8-bit, H.264 Low 4:2:0 8-bit for all formats up to 1080p60.

---

## Control

**Built in Control Panel**

13 buttons for transport and device control with search dial and 2.2 inch color display.

**External Control**

RS-422 deck control, SDI start/stop, timecode run. Includes Blackmagic HyperDeck Ethernet Protocol. Supports remote FTP file upload.

---

## Software

**Software Included**

Blackmagic OS Blackmagic HyperDeck Setup Internal Software UpgradeLoaded at system start, or via Blackmagic HyperDeck Setup using USB port.

---

---

## Operating Systems



Mac 10.15 Catalina,  
Mac 11.1 Big Sur or later.



Windows 10, 64-bit.

---

## Displays

Built in 2.2 inch LCD for video, audio and timecode monitoring and menu settings.  
LED indicator lights above the SD media slots.

---

## Power Requirements

### Power Supply

1 x Internal 100 - 240V AC 50/60Hz.  
1 x 4 pin XLR 12V DC In for external  
power supply or battery use.

### Power Usage

100 W max.

---

## Accessories

### Optional Accessories

HyperDeck Extreme Control  
Teranex Mini Rack Shelf

---

## Physical Installation

Half rack unit width, 1 rack unit height.

---

## Physical Specifications



---

## Environmental Specifications

**Operating Temperature**  
0° to 40° C (32° to 104° F)

**Storage Temperature**  
-20° to 60° C (-4° to 140° F)

**Relative Humidity**  
0% to 90% non-condensing

---

## What's Included

HyperDeck Studio HD Plus

---

## Warranty

12 Month Limited Manufacturer's Warranty.

All items on this website are copyright Blackmagic Design Pty. Ltd. 2022, all rights reserved.  
All trademarks are property of their respective owners. MSRP includes GST and excludes shipping costs.  
This website uses remarketing services to advertise on third party websites to previous visitors to our site.  
You can opt out at any time by changing cookie settings. [Privacy Policy](#)

Blackmagic Design Authorized Reseller