


Microsoft Teams Rooms System for Medium and Large Room

Yealink MVC series are native and easy-to-use video conferencing solutions specially designed for Microsoft Teams rooms. The MVC series provides a full-scene video conference solution to cover all of the meeting rooms from small to large. According to the unique characteristics of the video conferencing room, a high-performance mini-PC is specially released. In the design of mini-PC, it takes into account both aesthetics and practicability, that fully integrating the cable management with itself to provide a flexible and reliable deployment solution for any meeting room. The MVC series features the native Microsoft Teams-tailored user interface that is easy to be operated with close-to-zero learning curve, and you just walk into the meeting room and start your scheduled Teams or Skype for Business meeting with one-touch join. Yealink MVC860 includes a 4K UVC86 USB PTZ camera with 12x optical zoom, MCore, MTouch II and MSpeaker II Soundbar. You can also select VCM34/VCM38/CPW90 array microphones to work with MVC860.

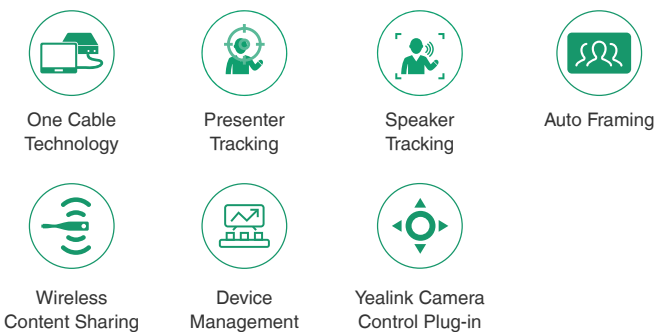

Key Features and Benefits

Native Microsoft Teams-tailored user interface, smooth conference experience

Native Microsoft Teams-tailored user interface offers a one-touch meeting join. Designed with the idea of multi-function all-in-one, the MTouch II touch panel allows you easily perform call control, camera control, content sharing and other functions. At the same time, MTouch II has a built-in Human Motion Sensor that the conference system can be automatically waken up and you can immediately start the conference.

Smooth tracking feature & multiple audio solution

Yealink UVC86 camera allows for the auto-framing of all participants present at a meeting, speaker-tracking of the speaker talking at a meeting, and presenter-tracking of the presenter at a meeting, freeing your hands and focusing on the meeting itself. Meanwhile, with the Yealink camera control plug-in and camera presets supported, the mechanical pan, tilt and zoom can be easily done quietly in one step. Empowered with 12x optical zoom, UVC86 supports 4K video calls that conducts business to capture everyone in the meeting room clearly. the UVC86 delivers face to face, intelligent and smooth video experience by precisely reproducing every moment and detail, always showing the best picture of your room. You can also select VCM34/VCM38/CPW90 array microphones to work with MVC860. Also, Yealink Noise Proof technology effectively eliminates background distractions and noises that you can enjoy a crystal-clear voice even in a noisy environment.

Content sharing in real time

The unique wireless content sharing solution provides participants with maximum flexibility, that a one-click content sharing can be simply realized by plugging into the WPP20 only. With a high resolution of 1080P/30 frames, it provides users with a better content sharing experience. Besides, the wired content sharing is also available by connecting to the USB-C port or HDMI port.

Simple to deploy, easy to use

With the VCH port, MCore is specially designed for the video meeting rooms that the deployment can be easily extended. At the same time, its all-in-one design with the feature of cable management ensure the stability of the wire connection, and the most appropriate deployment can be achieved according to the layout of the meeting room. One CAT5e is totally enough to connect the TV area and the conference table area and to complete the data transmission and power supply, no additional power supply or extension cable is needed, which not only simplifying the deployment but also effectively reducing deployment costs.

Manage your devices remotely

This solution supports Yealink Device Management Platform/Cloud Service, you can flawlessly manage, monitor, configure, update and diagnose all Yealink audio and video devices peripherals on this platform remotely.

Package Content

- MCore Mini-PC
- MTouch II touch panel
- UVC84 USB PTZ camera
- VCM34 array microphones (optional)
- VCM38 array microphones (optional)
- CPW90 array microphones (optional)
- One or two Yealink soundbars (optional)
- WPP20 wireless presentation pod (optional)

Preload

- Windows 10 IoT Enterprise X64
- Windows 10 IoT Enterprise License
- Microsoft Teams Rooms App, support Skype for Business on-premise/online and Teams meetings
- Yealink RoomConnect MCore

MCore Mini-PC

- 8th-gen Intel® QUAD-CORE i5
- Memory: 8GB (2 x 4GB)
- Storage: 128GB SSD
- 2 x HDMI video output with CEC supported
- Bluetooth and Wi-Fi
- 1 x Yealink VCH port (RJ45), connect to MTouch II
- 4 x USB3.0 Type-A
- 1 x 10/100/1000M Ethernet port
- 1 x Power port
- 1 x Security lock slot
- Integrated cable management

MTouch II touch panel

- 8-inch IPS screen
- 1280 x 800 resolution
- 10-point capacitive touch screen
- 3.5mm headset jack
- Human Motion Sensor
- Angle adjustable bracket (28° ~ 50°)
- 1080P/30FPS FHD for sharing
- Support wired and wireless content sharing
- Built-in Wi-Fi AP for Yealink wireless presentation device
- HDMI/USB-C HD video input

UVC86 USB PTZ Camera

- 4K camera
- 20.4 × HD zoom (12x optical, 1.7x digital)
- Field of view (diagonal):
PTZ camera: 90° DFOV, 81° HFOV, 50° VFOV
panoramic camera: 120° DFOV, 110° HFOV, 78° VFOV
- Auto Framing
- Speaker Tracking
- Presenter Tracking
- Camera presets
- Pan range: 200°
- Tilt range: 130°
- 1 x HDMI out
- 1 x Yealink Microphone port (RJ-45)
- 1 x USB 3.0 Type-B
- 1 x USB 2.0 Type-A
- 1 x Power port
- 1 x Security lock slot
- 1 x Reset slot

VCM34 Array Microphone

- Built-in 3-microphone array
- 360° 20ft (6-meter) voice pickup range
- Cascade connection up to 6 units
- Mute button with bicolor LED

VCM38 Ceiling Mircophone

- Built-in 8-microphone arrays
- 360°-degree voice pickup
- Cascade connection up to 8 units
- Dual-color LED indicator

CPW90 Wireless Microphone

- 360°-degree voice pickup
- Capacitive mute touchpad
- 19-hour talking time
- 11-day standby time



Yealink Soundbar

- Frequent response: 100Hz - 20KHz
- S/N: ≥70dB
- 1 x Line-in (3.5mm)


Package Features (Base kit)

- N.W/CTN: 6.88Kg
- G.W/CTN: 7.54Kg
- Carton Meas: 420mm x 275mm x 387mm

Scene Graph in a Conference Room

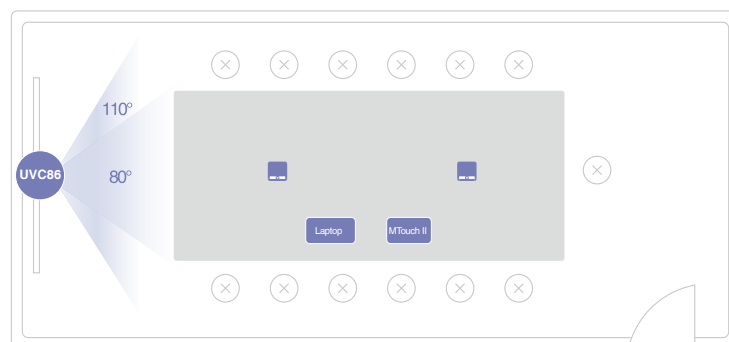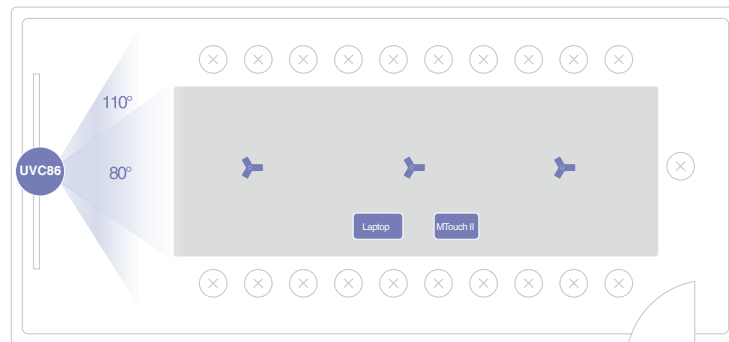

Connection

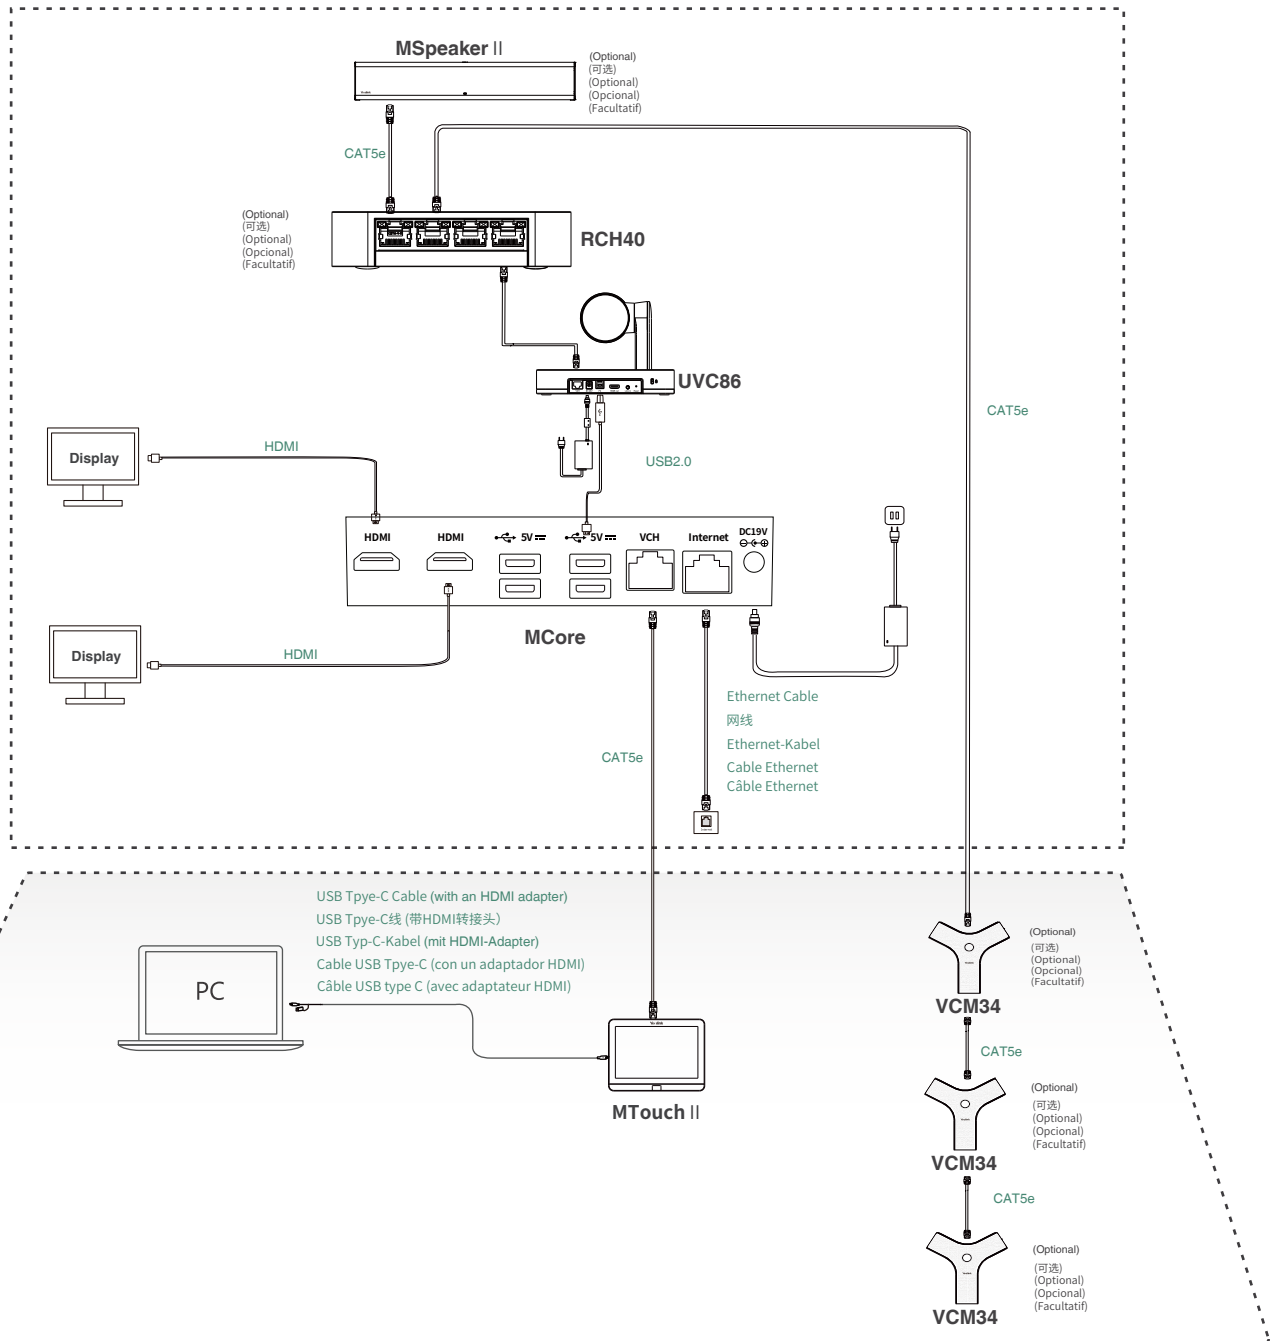

When starting up the system for the first time, you need to connect a mouse to complete the initial configuration. We recommend using the wireless mouse and keyboard kit.



For more information about the installation and deployment of accessories (for example, the installation of MCore package or the UVC86 camera), refer to the Quick Start Guide of corresponding accessory.



About Yealink

Yealink (Stock Code: 300628) is a global brand that specializes in video conferencing, voice communications and collaboration solutions with best-in-class quality, innovative technology and user-friendly experience. As one of the best providers in more than 140 countries and regions, Yealink ranks No.1 in the global market share of SIP phone shipments (Global IP Desktop Phone Growth Excellence Leadership Award Report, Frost & Sullivan, 2019).

Copyright

Copyright © 2021 YEALINK(XIAMEN) NETWORK TECHNOLOGY CO., LTD.

All rights reserved. No parts of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, photocopying, recording, or otherwise, for any purpose, without the express written permission of Yealink(Xiamen) Network Technology CO., LTD.

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO., LTD.
Web: www.yealink.com
Addr: No.1 Ling-Xia North Road, High Tech Park,
Huli District, Xiamen, Fujian, P.R. China
Copyright©2021 Yealink Inc. All right reserved.