



Protect what matters most.

Watchguard™ Force Wireless WiFi & 4G Alarm Pack with Accessories

The Watchguard™ Force alarm pack is the perfect security solution. Connect to WiFi and insert a SIM card for dual protection. When connected to WiFi remote view, receive push notifications and control your alarm system via the mobile app. In the event of a power outage the control panels 4G connection will send SMS notifications. The alarm pack is compatible with wide range of accessories to fit the security needs of any home, at any size.

- Versatile security for residences, offices and stores
- Reliable protection: In event of a power outage the control panel will send SMS notifications
- 6 hour backup battery, activated by power outage
- Connect to WiFi to control & monitor the alarm system via the phone app or receive email notifications
- Contact ID for central monitoring compatibility
- Connect up to 50 wireless accessories and 10 remotes



Real-time Push Notifications



Complete Wireless Accessory Range



Voice Controlled Home Integration

Receive instant notifications and maintain full control of your system from anywhere with the free Android/iOS app.



Smart Life - Smart Living

The Smart Life - Smart Living app offers instant notifications and full, easy-to-use control over the Watchguard™ alarm system from anywhere. Available for download for iOS or Android device.

- Free to download
- Control and monitor your alarm system

The Smart Life - Smart Living app is also compatible with Philips® Hue Lights , Control Nest® Thermostat and more.




Real-time alarm notifications

Receive instant push, email or SMS notifications whenever an alarm event is triggered.




Complete alarm system control

Activate & deactivate the control system, edit sensor names & status, create alarm zones with schedules, and more.

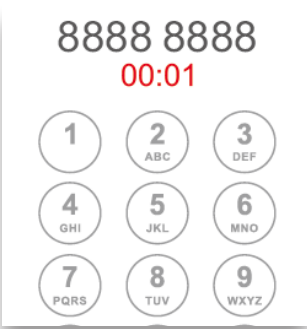

Control via SMS or phone call

Add phone numbers to control the system. Store 3 numbers for SMS control, 5 for phone call control & 2 for CMS.

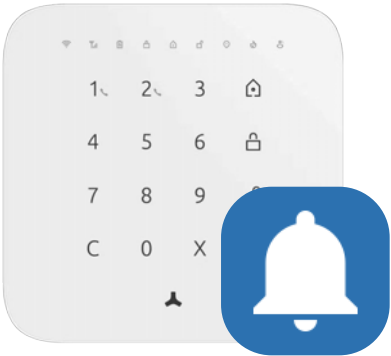

Built-in local siren

Activate via the alarm control panel for immediate siren. With adjustable duration (0 ~ 300s) and 105dB output sound.



Central monitoring compatibility

The alarm system supports Ademco Contact ID & SIA TCP/IP protocol for central monitoring compatibility.

Smart Home Integration

The Watchguard™ Force WiFi & 4G Alarm Pack can be voice controlled with Amazon Alexa and Google Assistant devices. Arm, disarm, enable/disable home or stay mode with voice control.



Dual Protection:

The Watchguard™ Force WiFi and 4G Alarm Pack offers reliable backup protection in the event of a power outage and/or the WiFi network becoming unavailable.



WiFi connection & smartphone app

Connect the alarm control panel to WiFi to monitor and control the alarm system via the Smart Life - Smart Living App.

- Receive emails and push notifications
- Alarm, disarm, edit alarm devices, edit zones & set schedules from anywhere



4G network connection

The control panel is compatible with a 4G/3G network, choose to always receive SMS text notifications or only when there is a power outage.

- Up to 3 users can receive SMS notifications
- In the event of a power outage or if WiFi is down receive alarm notifications via SMS

** Requires active SIM card (not included)
Standard, nano & micro SIM card adapter included*



Long lasting backup battery

The control panel's backup battery ensures you stay protected and alerted in the event of a power outage.

- 6hr standby back up battery
- Plus receive SMS alarm notifications and SMS system status alerts when WiFi/power is down (with 4G SIM card)

Watchguard™ Force Wireless WiFi and 4G Alarm Pack

Model: ALL-PACK1



1 x Control Panel + Wall Mount Bracket



1 x Wireless Indoor PIR Sensor + Bracket



1 x Wireless Magnetic Reed Switch



2 x Remote Controls



2 x RFID Cards



1 x AC Power Adapter

Watchguard™ Force Wireless Accessories

PIR Sensor + Reed Switch	Indoor PIR Sensor	Outdoor PIR Sensor	Reed Switch + Vibration Sensor
<ul style="list-style-type: none"> • 8m range, 90° angle • Tamper protection • 3VDC (2 x AAAA, LR61 batteries) 	<ul style="list-style-type: none"> • 7m ~ 8m range, 110° angle • Tamper protection • 3VDC (2 x AA, 1.5V LR6 batteries) 	<ul style="list-style-type: none"> • 12m x 12m range, 110° angle • Pet immunity, up to 20kg • Weather & insect proof • 12VDC power supply 	<ul style="list-style-type: none"> • Tamper protection • Adjustable vibration sensitivity • 3VDC (2 x AAAA, No.9 LR61 batteries)
ALL-PIR1	ALL-PIR2	ALL-PIR3	ALL-RSW1
Magnetic Reed Switch	Outdoor Strobe Siren	AC-Powered Indoor Siren	IR Multi-Beam Sensor
<ul style="list-style-type: none"> • 2cm magnet sensor gap • Tamper protection • 1.5VDC (1 x AA battery) 	<ul style="list-style-type: none"> • 115dB max. siren volume • 12VDC power supply • 3.7V / 2200mA Lithium backup battery 	<ul style="list-style-type: none"> • 90dB max. siren volume • 110~240VAC, 50Hz, AU plug • 3.7 / 600mA backup battery 	<ul style="list-style-type: none"> • 20m IR distance (outdoors) • 4 infrared beams • Built-in Solar Panels • LiFep04 battery
ALL-RSW2	ALL-SIR1	ALL-SIR2	ALL-BEAM1
Smoke Detector	Remote Control		
<ul style="list-style-type: none"> • Standalone smoke detector • LED light & buzzer alarm • 3VDC (2 x Li-batteries) 	<ul style="list-style-type: none"> • Arm, disarm. mute, activate home mode or emergency call • 3VDC (1 x CR2032 button cell battery) 		
ALL-SMD1	ALL-RC1		

Each Watchguard™ Force alarm system is compatible with up to 50 wireless accessories, 10 remotes & 50 RFID cards.